



2 Drawer

Vehicle Storage System



Part No 51000

Installation:



Includes:

Mounting Kit:

4 x bolts


4 x washers

4 x locking nuts



1 Remove right hand side top section by undoing the 10 retaining screws and set aside taking care not to loose the fasteners and remove/open the fridge slide by sliding outwards. This allows access to the internal base of the drawer system so it can be bolted to the vehicle

Installation:

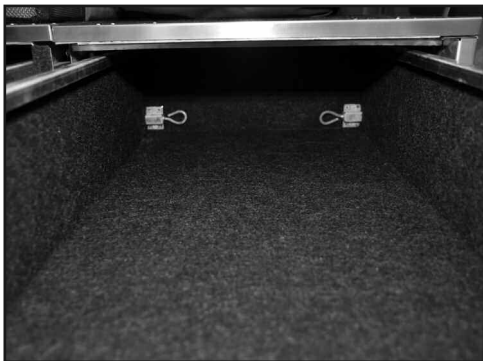

2 Remove the 2 drawers by unlatching the 2 retaining latches located at the rear interior of each of the drawers

3 Due to the heavy weight of this product please ensure that you have at least 1 person assist you in lifting this product into the interior of the vehicle. Also ensure that the drawers and tops are removed to minimise weight while installing into the vehicle



4 Check the base of the vehicle that the drawer system is to be installed in and identify suitable mounting points within the vehicle. Either use existing vehicle mounting points or new drill new mount points using the bottom fixing ribs as a guide for drilling the holes or locating to existing mounting points.



WARNING: Care must be taken when drilling new holes into your vehicle. Ensure that you avoid fuel and brake lines, electrical wires and other components that may damage your vehicle

NOTE: The mounting points on the ribs are elongated and the ribs are adjustable to assist in locating suitable mounting points

NOTE: Automotive carpet may need to be removed using a sharp knife to gain easier access to the vehicle mounting points or for drilling holes

NOTE: Use a minimum of 4 mounting bolts provided to ensure maximum mounting strength and weight capacity are achieved.

Installation:

5 Use the existing removed vehicle bolts to secure the frame base via mounting slots provided OR the mounting bolts provided to secure to the vehicle. Ensure the bolts are securely tightened and use a suitable thread glue to ensure they do not loosen.



7 Refit both drawers ensuring that rear locating stops automatically engage.

NOTE: A firm push is required to move the drawers past the automatic drawer stops.



6 Once the mounting bolts are secure refit or close the fridge slide, re attach the right-hand top section and trim ensuring all fasteners are tightened.

Care and Maintenance:

ENSURE:

- Ensure all extremities are clear of moving parts especially when opening and closing the drawers and fridge slide
- Distribute weight evenly when loading the drawer system in both the drawers and top sections
- Ensure all items stored on top of the drawer system are secured using the anchor points and suitable tie downs
- For optimum safety install a quality cargo barrier
- Ensure the product is regularly maintained and cleaned to optimise the products life span
- Ensure drawers are locked at all times to protect contents

AVOID:

- Do not overload the fridge slide weight capacity (Keep below 85kgs)
- Do not overload the drawers (keep below 100kgs)
- Do not open both the fridge slide and drawers at the same time as this may cause product instability
- Do not use chemicals, solvents, when cleaning the carpet. Use warm soapy water and vacuum regularly
- Do not place sharp objects on the carpeted areas as this may damage the surface
- Metal surfaces inside vehicles will become extremely hot. Avoid touching metal surfaces until they cool down




WARNING: Product is designed for interior use only

Care and Maintenance:

Maintenance:

- Remove both drawers using the internal rear latches and inspect and clean all roller bearings using a clean cloth or rag
- Regularly check and tighten all fasteners including mounting points
- Replace seized, rough, loose roller bearings
- Clean drawer runners and lubricate using a good quality light grease (small amount only)
- Clean carpet by regularly vacuuming . Use a damp cloth and warm soapy water to clean dirt and marks
- Use a quality stainless steel cleaner on body sides
- Use a quality metal polish on metal trim (remove prior to cleaning to avoid marking the carpet)
- Use Graphite powder or silicone spray for lock barrels
- Use light grease on lock latch and light oil on lock handle




Spare Parts:

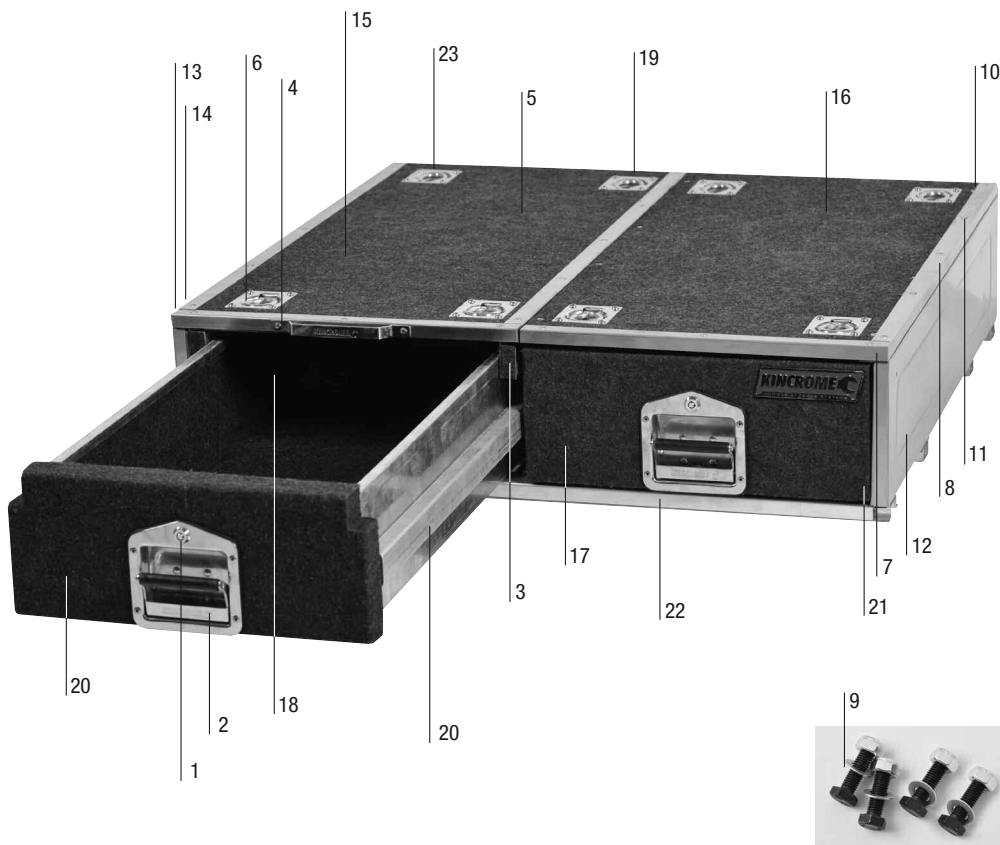


	Part No	Description
1	51000-1	Lock & Key
2	51000-2	Pull handle latch 1 pce (stainless steel)
3	51000-3	Roller bearing 1 pce
4	51000-4	Fridge slide handle
5	51000-5	Spare carpet (1X1M)
6	51000-6	Retractable tip down point x1 (with fasteners)
7	51000-7	Corner Trims (front)
8	51000-8	Corner Trim (side)
9	51000-9	Mounting bolt kit
10	51000-10	Hex key kit x 8
11	51000-11	Screw kit x 24
12	51000-12	Stainless side panels 2pce (right & left)

	Part No	Description
13	51000-13	Fridge slide knob
14	51000-14	Fridge slide lock
15	51000-15	Fridge slide
16	51000-16	Ply wood Top (RHS)
17	51000-17	Drawer front
18	51000-18	Rear drawer latch x 1 (with screws)
19	51000-19	Rear panel
20	51000-20	Drawer (LHS)
21	51000-21	Drawer (RHS)
22	51000-22	Base cross beam mounting brackets x 4
23	51000-23	Rubber stopper

Dimensions:

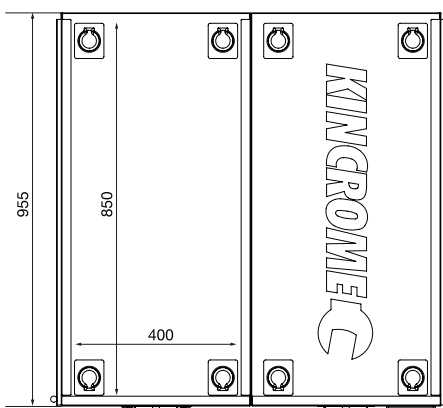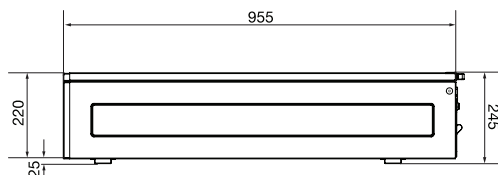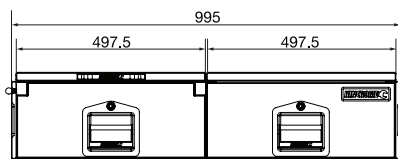

INTERNAL DRAWER SIZE

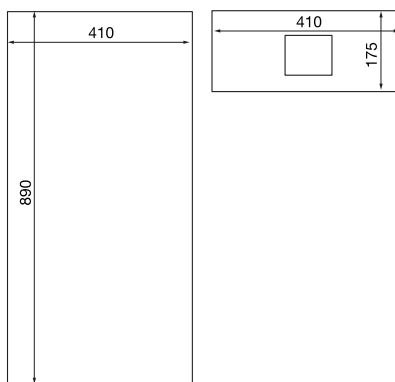

Weight: 75Kg

NOTE:
GENERAL DIMENSIONS DO NOT TAKE CARPET THICKNESS,
HANDLES AND FIXTURES INTO CONSIDERATION